

2-Wire Video Intercom Device

Operation Guide

Contents

Chapter 1 About this Manual	1
Chapter 2 Appearance Description	2
2.1 Module Door Station Appearance	2
2.2 Indoor Station Appearance	2
Chapter 3 Operation on Door Station	3
3.1 Call Indoor Station from Door Station	3
3.2 Unlock Door	3
Chapter 4 Operation on Indoor Station	4
4.1 Menu	4
4.2 Set Live View	5
4.3 View Call Logs	6
4.4 View Capture Logs	6
4.5 Shortcut Settings	6
4.6 Volume Settings	7
4.7 Ringtone Settings	7
4.8 Call Settings	8
4.9 App Settings	9
4.9.1 Connect to Wi-Fi	9
4.9.2 Link to the Mobile Client	10
4.9.3 Unlink App Account	11
4.10 Adjust Brightness	12
Appendix A. Legal Information	14
Annendix R Symbol Conventions	16

Chapter 1 About this Manual

Get the manual and related software from or the official website (http://www.hikvision.com).

Product	Model
Door Station	DS-KD7003EY-IME2
Network Indoor Station	DS-KH7300EY-WTE2
	DS-KH7300EY-TE2

More Languages



Chapter 2 Appearance Description

2.1 Module Door Station Appearance

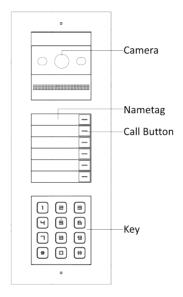


Figure 2-1 Module Door Station Appearance

2.2 Indoor Station Appearance

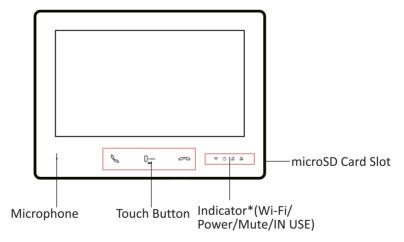


Figure 2-2 Appearance

Chapter 3 Operation on Door Station

3.1 Call Indoor Station from Door Station

After powering on the device, the door station can call indoor station.

Steps

- 1. The door station call indoor station directly.
- 2. The indoor station views the live video.



Figure 3-1 Call Indoor Station

3.2 Unlock Door

Unlock Door by Public Password

Note

You should install the keypad module to complete the following operation.

1. Enter [#] + Public Password + [#] to open the door.

Unlock Door by Card

Note

You should install the card reader module to complete the following operation.

1. Swipe the card on the card induction area to unlock the door.

Chapter 4 Operation on Indoor Station

4.1 Menu

You can mute, unlock, view live videos, and check status on the menu page.

Note

The Live View icon can be disabled.

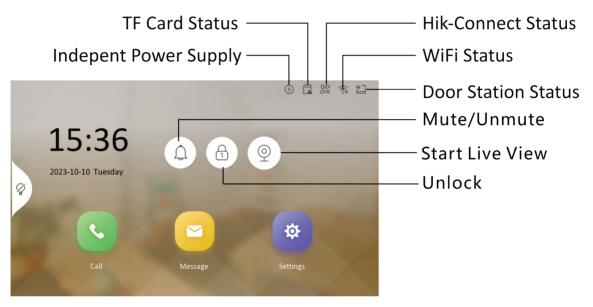


Figure 4-1 View Status

Note

After muting, there will be no ringtone when receiving a call.

(A)

Unlock linked device.

By default, you can unlock the main door station.

9

View live videos of main door station.

4.2 Set Live View

On the live view page, you can view the live video of linked door station, outer door station and sub door station.

Steps

1. Tap **Settings** \rightarrow \bigcirc **Configuration** \rightarrow \bigcirc to enter the page of Local Information.

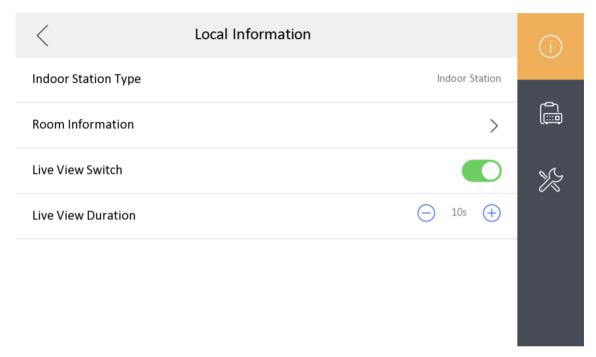


Figure 4-2 Local Information

2. Enable Live View.

The live view icon will be shown on the main page.

3. Tap Live View on the main page and select a camera to start live view.

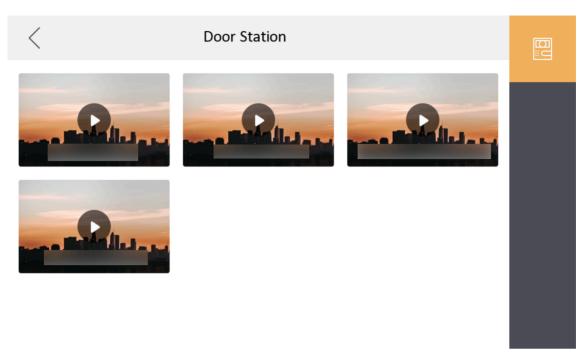


Figure 4-3 Live View

4.3 View Call Logs

Steps

- **1.** Tap Call \rightarrow to enter the call log page.
- 2. Tap a piece of call logs in the list to call back.



- The indoor station saves call logs from door stations, outer door stations, and sub door stations.
- Hold a piece of call logs to open the call logs handling menu. Tap **Delete** to delete the piece of call logs. Tap **Clear** to delete all pieces of call logs.

4.4 View Capture Logs

Steps

- 2. You can view all capture logs.

4.5 Shortcut Settings

Unlock Keys

Tap **Settings** \rightarrow \blacksquare \rightarrow **Shortcut Settings** to enter the Shortcut Settings page.

Unlock Key

The unlock icon
will be displayed on the main page.

Shortcut Keys

You can set different functions to different shortcut keys.

Tap to enable the shortcut key. Set the function, device and lock for the key.

4.6 Volume Settings

Set the microphone volume, prompt sound volume and call volume.

Steps

1. Tap **Settings** \rightarrow **Settings** to enter the volume settings page.

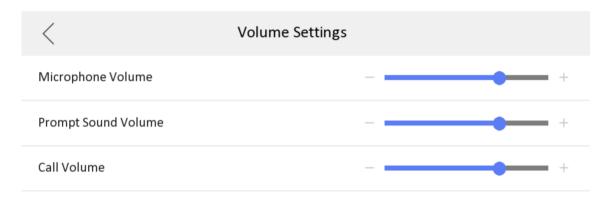


Figure 4-4 Volume Settings Page

4.7 Ringtone Settings

You can set the ringtone on call settings page.

Steps

1. Tap **Settings** \rightarrow **s** to enter the call settings page.

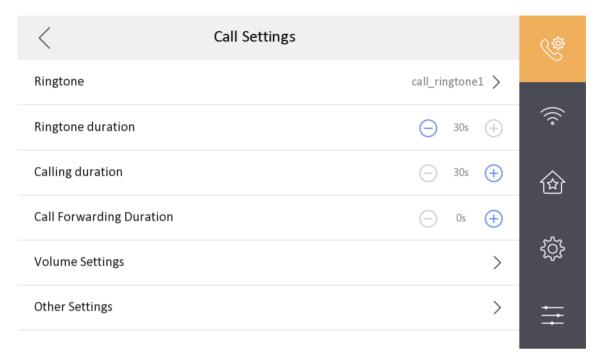


Figure 4-5 Call Settings

4.8 Call Settings

You can set the ring duration, call forwarding time on call settings page.

Steps

1. Tap **Settings** \rightarrow **s** to enter the call settings page.

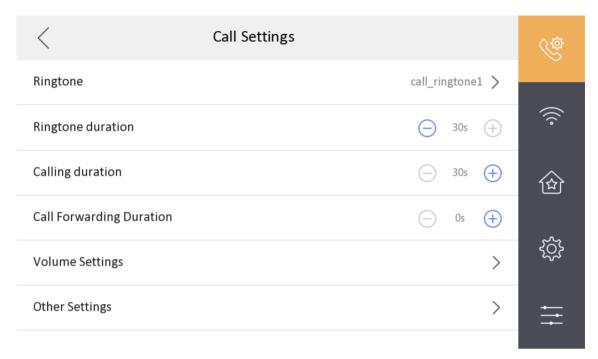


Figure 4-6 Call Settings

4.9 App Settings

The device support adding to Hik-Connect and configuration remotely via the client.

4.9.1 Connect to Wi-Fi

After connecting to Wi-Fi, you can view live videos and unlock the door via mobile App. Only some indoor stations support Wi-Fi.

Tap **Settings** → **Wi-Fi Settings** . Enable **Wi-Fi**, and the indoor station can search the Wi-Fi.

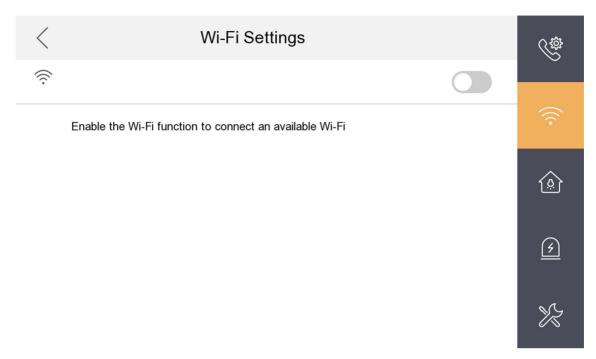


Figure 4-7 Wi-Fi Settings

After connecting to the Wi-Fi, you can operate remotely via the mobile App. The App supports displaying the list of linked door stations. You can unlock the door, receive calls from door stations.

4.9.2 Link to the Mobile Client

Before You Start



The function of the device varies according to different models. Refers to the actual device for detailed information.

Steps

- **1.** Tap **Settings** → Configuration → → Hik-Connect Service Settings to enter the settings page.
- 2. Enable Enable Hik-Connect Service.

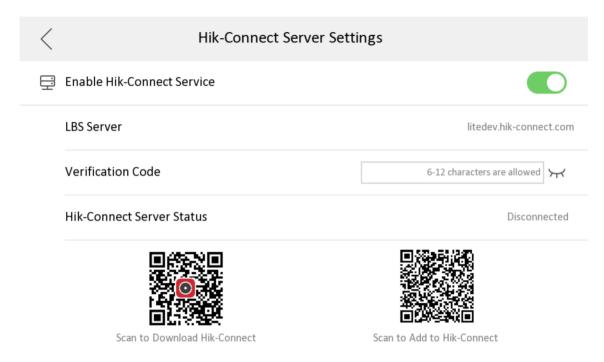


Figure 4-8 Enable Hik-Connect Service

3. Edit LBS server and Verification Code.



Verification code is used to add the device to mobile client.

4. Optional: Scan the QR code on the screen.



- · Scan the left QR code on the screen to access Hik-Connect.
- Scan the right QR code on the screen to add the device to the mobile client.

4.9.3 Unlink App Account

Remove the account from the mobile client.

Steps

- 1. Tap Settings $\rightarrow \blacksquare \rightarrow$ Configuration.
- 2. Tap to enter the system maintenance page.

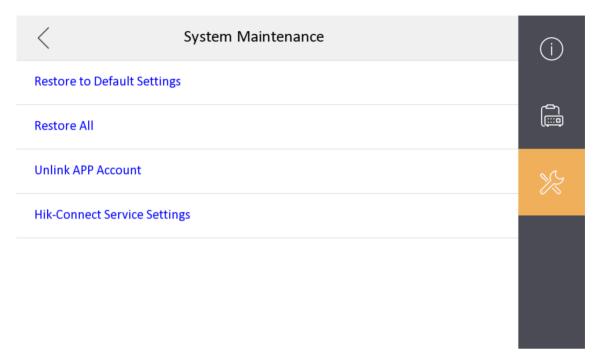


Figure 4-9 System Maintenance

3. Tap Unlink App Account, and follow the steps on the page.

4.10 Adjust Brightness

Steps

1. Tap **Settings** \rightarrow **o** to enter the General Settings page.

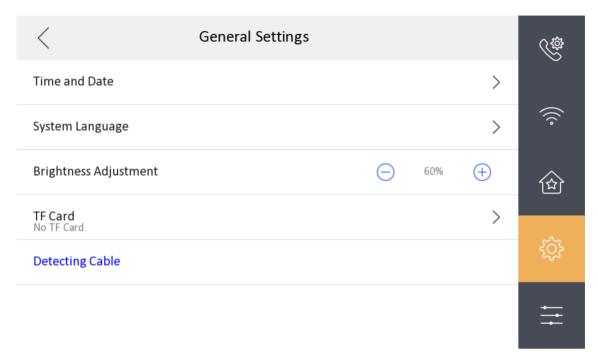


Figure 4-10 General Settings

2. Tap + or - to adjust the screen brightness.

Appendix A. Legal Information

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to
 firmware updates or other reasons. Please find the latest version of the Document at the
 Hikvision website (https://www.hikvision.com). Unless otherwise agreed, Hangzhou Hikvision
 Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no
 warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part
 of this Document may be excerpted, copied, translated, or modified in whole or in part by any
 means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

• TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE

- PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.
- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE
 SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW.
 ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT
 INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF
 PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY
 RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE
 DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR
 PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT
 RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF
 HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.
- © Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Appendix B. Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
<u> </u>	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
iNote	Provides additional information to emphasize or supplement important points of the main text.

