



# Instructions for Mini Eyeball/Dome Bracket Installation

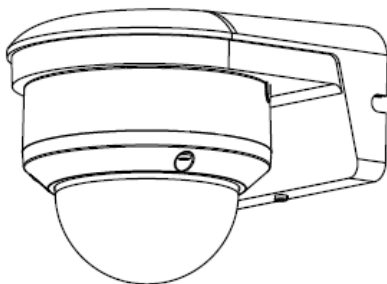


P/N: RVIM1BZJCORA

## Quick Guide

# Bracket Dimensions

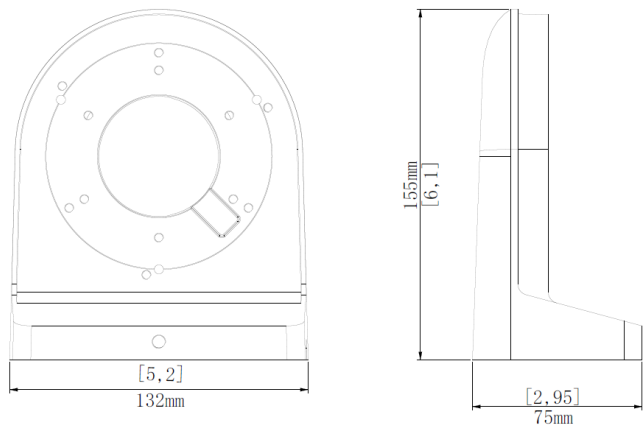

# Accessories

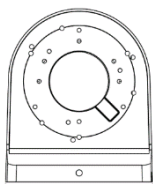


RVIM1BZJC0RA




Mounting Paper



Screw A




Screw B

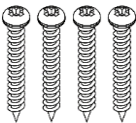

Screw C


## Tools

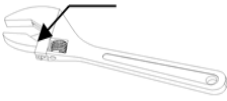


Monkey Wrench



Hex Wrench




Cross Screwdriver




Straight Screwdriver

## Wall Mounting


1. Paste the mounting paper to the corresponding installation position and make screw holes.
2. Hammer four screws **B** into the holes and lock the bottom cap of the bracket with screws **C** as shown below.

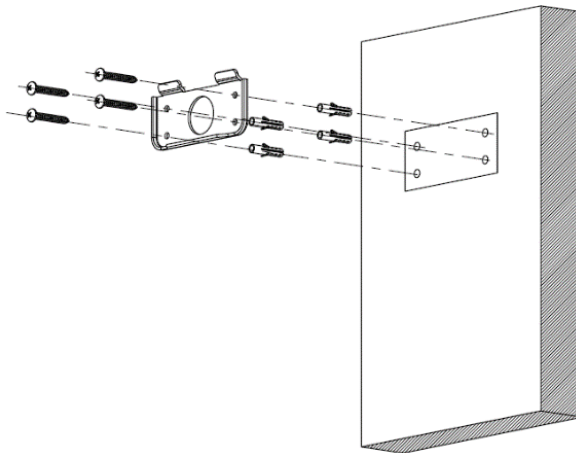


3. Pass the cable through the cable slots on both sides of the bracket base.
4. Draw out the cable from the center hole on the base and then install the base on the bottom cap and tighten the screws.

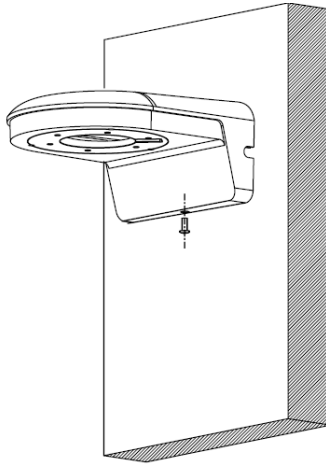

5. Connect the cable securely and hide it in the box.
6. Install the camera base on the bracket base as shown below.
7. Lock the camera cover to the box as shown below to complete the installation.

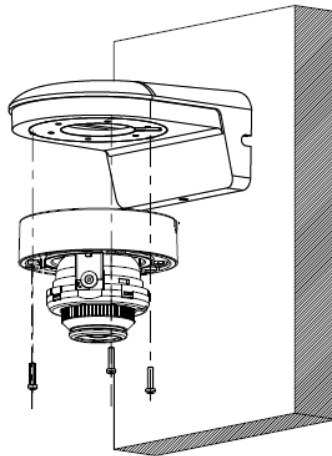

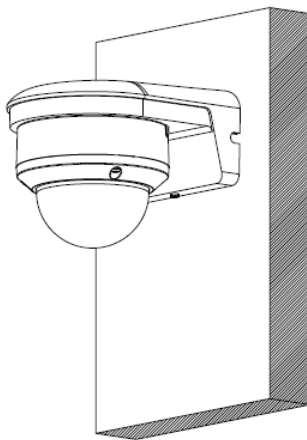

## Supported Camera

P/N	Description
RVCM72A300RA	VUpoint 4MP Poe Eyeball AI Camera
RVCM32A330RA	VUpoint 5MP PoE Dome AI Camera



© RISCO Group, 08/2025. All rights reserved.

5IN3133